

**HD Angle Stop Custom Flow Control Valve for Bathroom & Kitchen Sinks. U.S.  
Patent 8,646,486**

- Customized to fit Client's GPM flow needs
- Easy installation on a 3/8" and 1/2" angle stop
- 2 to 4 LEED Points Available
- Lead Free Eco Brass
- NSF ANSI 61 Certified Washer
- Dual Elliptical Chambers

| SKU      | Description                            | WEIGHT          | DIMENSIONS   |
|----------|--|-----------------|--------------|
| HDSK-50  | Flow Control Valve (Faucet) - .50 GPM  | 0.125 - .20 lbs | 3x3 poly bag |
| HDSK-75  | Flow Control Valve (Faucet) - .75 GPM  | 0.125 - .20 lbs | 3x3 poly bag |
| HDSK-100 | Flow Control Valve (Faucet) - 1.00 GPM | 0.125 - .20 lbs | 3x3 poly bag |
| HDSK-125 | Flow Control Valve (Faucet) - 1.25 GPM | 0.125 - .20 lbs | 3x3 poly bag |
|          | Two Flow Control Valves per Package    |                 |              |

## INSTALLATION INSTRUCTIONS

View installation video @ <http://www.watermiser.com/installation-instructions>

1. Go underneath the sink and locate the hot and cold angle stops and turn to the off position.
2. Remove the flex line at the angle stop with an adjustable wrench.
3. Clean debris out of supply line.
4. Check the FCV washer to ensure it is fully seated in the FCV.
5. Wrap plumbing tape clockwise on the angle stop.
6. Attach the Flow Control Valve to the hot and cold water side of the angle stops and tighten. Make sure the washer is seated against the angle stop. Do not continue if the part is not seated properly against the angle stop. Improperly seated parts might leak.
7. Reattach flex line to the Flow Control Valve and tighten. Flex line can be tightened down harder than the angle stop.
8. Ensure the Flow Control Valve is installed tightly and securely. Be sure not to over tighten.
9. Turn on the water supply at the angle stop and inspect for leaks.
10. Your faucet is now ready for use.

